

NEW
EVERSHARP
*Slim
Ventura*

THE "burp" PEN

FOLLOW THESE SIMPLE INSTRUCTIONS FOR YOUR
EVERSHARP *slim Ventura* SET

PEN

TO FILL...

Unscrew barrel from point section...submerge entire point in ink. With thumb and first finger, press filling activator several times. Replace barrel.

TO CLEAN...

Every two months, flush the pen three or four times with cold water — same as you do when filling with ink. After removing point from water, work filling activator to be sure all water is expelled.



PENCIL

Hold pencil with point down. Press cap down until lead appears at tip. As lead is used, press cap and more lead will appear.

TO RELOAD...

Remove cap and eraser, drop in 8 Eversharp leads. If too much lead extends from pencil tip, hold cap down and push back lead with your finger. Use only Eversharp 1 $\frac{3}{8}$ " lead. No other lead of different diameter will operate.

ERASER...

When eraser is worn out, replace with new Eversharp eraser No. 5R.



WID-M-1485